




Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required. Online Parts Request Form: [www.hillsdalehouse.com/parts\\_request.html](http://www.hillsdalehouse.com/parts_request.html)

**PARTS LIST**


- A (1) Headboard Panel
- B (1) Footboard Panel
- C (2) Leg Extensions
- I (2) Finials

**HARDWARE LIST**

- D (8) Long Allen Bolts
- E (4) Short Allen Bolts
- F (12) Spring Washers
- G (12) Metal Washers
- H (8) Rubber Washers
- J (8) Hex Nuts
- K (1) Allen Wrench

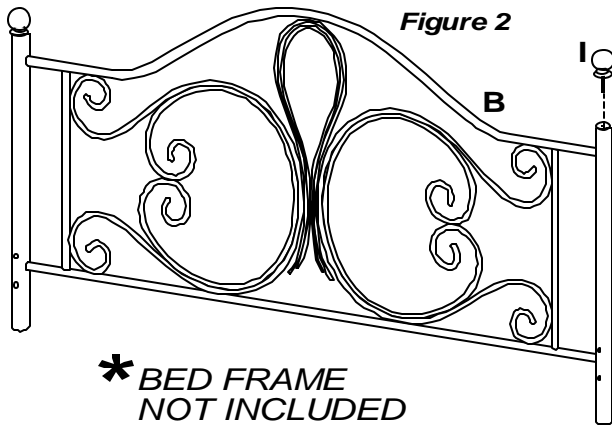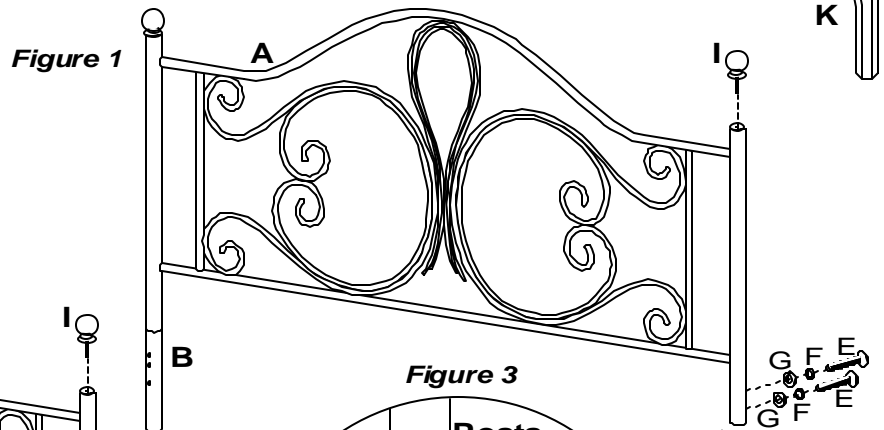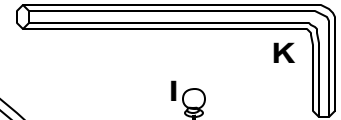

**\* BED FRAME NOT INCLUDED ONLY SHOWN ON FIGURE 3.**

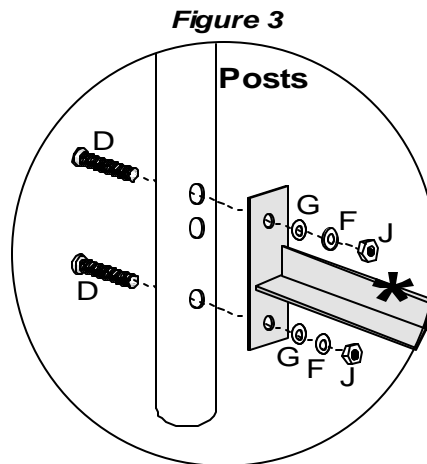

**STEP ONE**

Begin assembly by first attaching each Finial (I) to top of each post on both Headboard & Footboard Panels (A & B), by screwing into place. See Figures 1 & 2. Do not over-tighten as it may cause stripping to the threads.

**STEP TWO**

Insert both Leg Extensions (C) into bottom of Headboard Panel (A), and attach using 2 Short Allen Bolts (E), 2 Spring Washers (F) & 2 Metal Washers (G) per each post. Tighten bolts only using Allen Wrench (K) provided with hardware. See Figure 1.

**STEP THREE**

Attach Bed Frame (\*Not Included) to each Leg Extension (B) & post on Footboard Panel (B) using 2 Long Allen Bolts (D) from the back side, 2 Rubber Washers (H), 2 Metal Washers (G), 2 Spring Washers (F) & 2 Hex Nuts (J) per each post & leg extension. See Figure 3. Tighten all bolts only using Allen Wrench (K) provided. Assembly is now complete.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.