

IMPORTANT UNLESS OTHERWISE STATED, PLEASE DO NOT TIGHTEN BOLTS (AND/OR) SCREW UNTIL UNIT IS COMPLETELY ASSEMBLED. Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for reference.


Online parts Request From: [www.hillsdalehouse.com/parts-request.html](http://www.hillsdalehouse.com/parts-request.html)

**HARDWARE LIST**

- A (4) Allen bolts
- B (4) Spring Washers
- C (4) Metal Washers
- D (4) Hex Nuts
- E (1) Open End Wrench
- F (1) Allen Wrench



\* Bed Frame Not Included,  
Bed Frame Shown  
In Figure 1 .

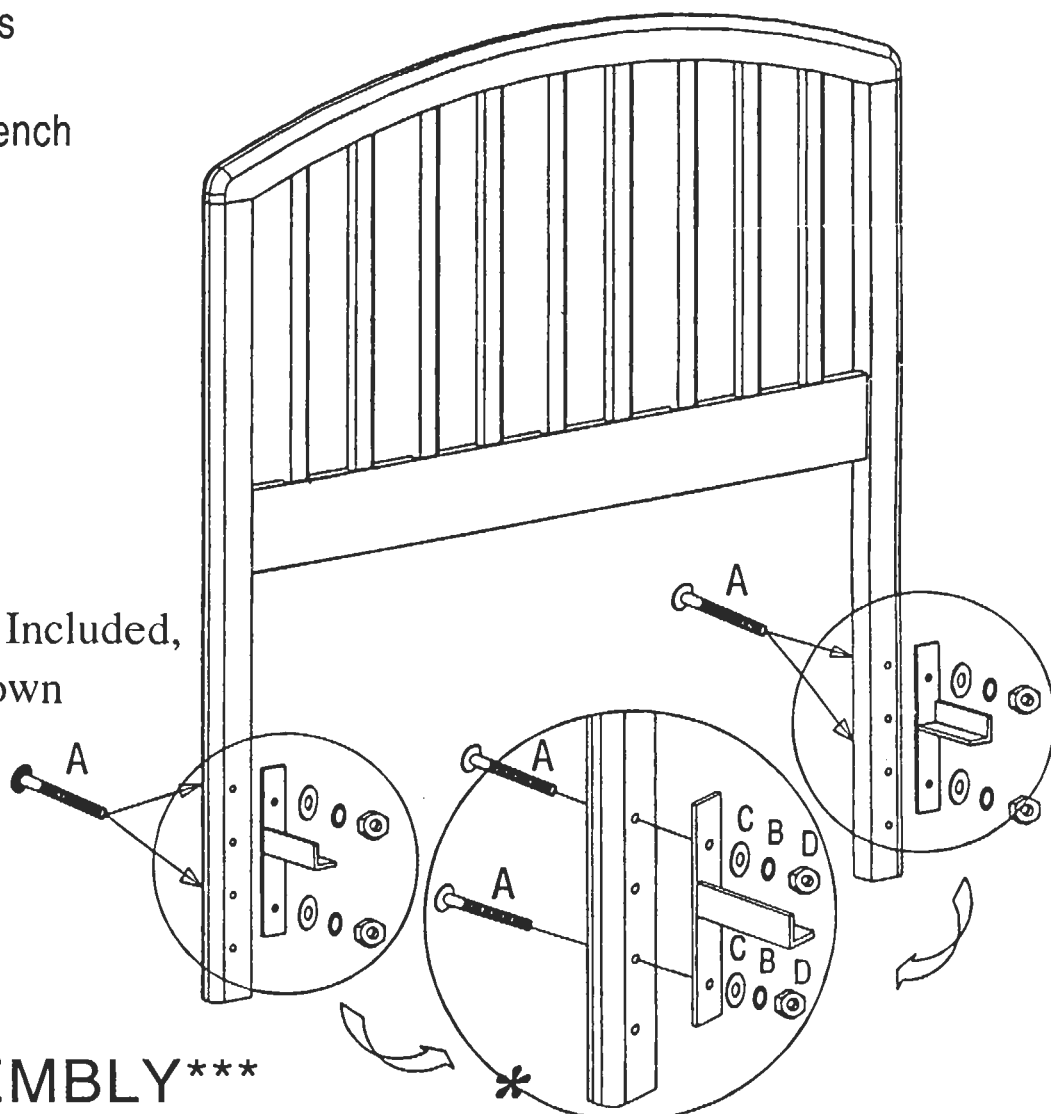

**\*\*\* ASSEMBLY \*\*\***

Attach each Bed Frame (\* Not Included) to posts on Headboard, using 2 Allen Bolts (A), 2 Metal Washers (C), 2 Spring Washers (B) & 2 Hex Nuts (D) per each side. Only Hand Tighten bolts & Nuts using Allen Wrench & Open End Wrench (E&F) once bolt bed frames have been attached. See Figure above for illustrated details.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish of your new Headboard will ever need. Never use harsh or abrasive cleaners for polishing. Periodic checks are recommended to