

# ARLINGTON BED SET

Model #100222-100376 (1501-460) Full Size - Metal Bed Set  
Model #100222-100377 (1501-500) Queen Size - Metal Bed Set

Date:  
04/22/09



Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

## HARDWARE LIST

- A (4) Allen Bolts 1/4" x 1/2"
- B (4) Allen Bolts 1/4" x 3/4"
- C (4) Allen Bolts 1/4" x 2"
- D (4) Hex Nuts 1/4"
- E (12) Flat Washers 1/4"
- F (1) Hex Wrench
- G (1) Allen Wrench

## PARTS LIST

- K (1) Headboard Panel
- L (2) Leg Extensions
- M (1) Footboard Panel

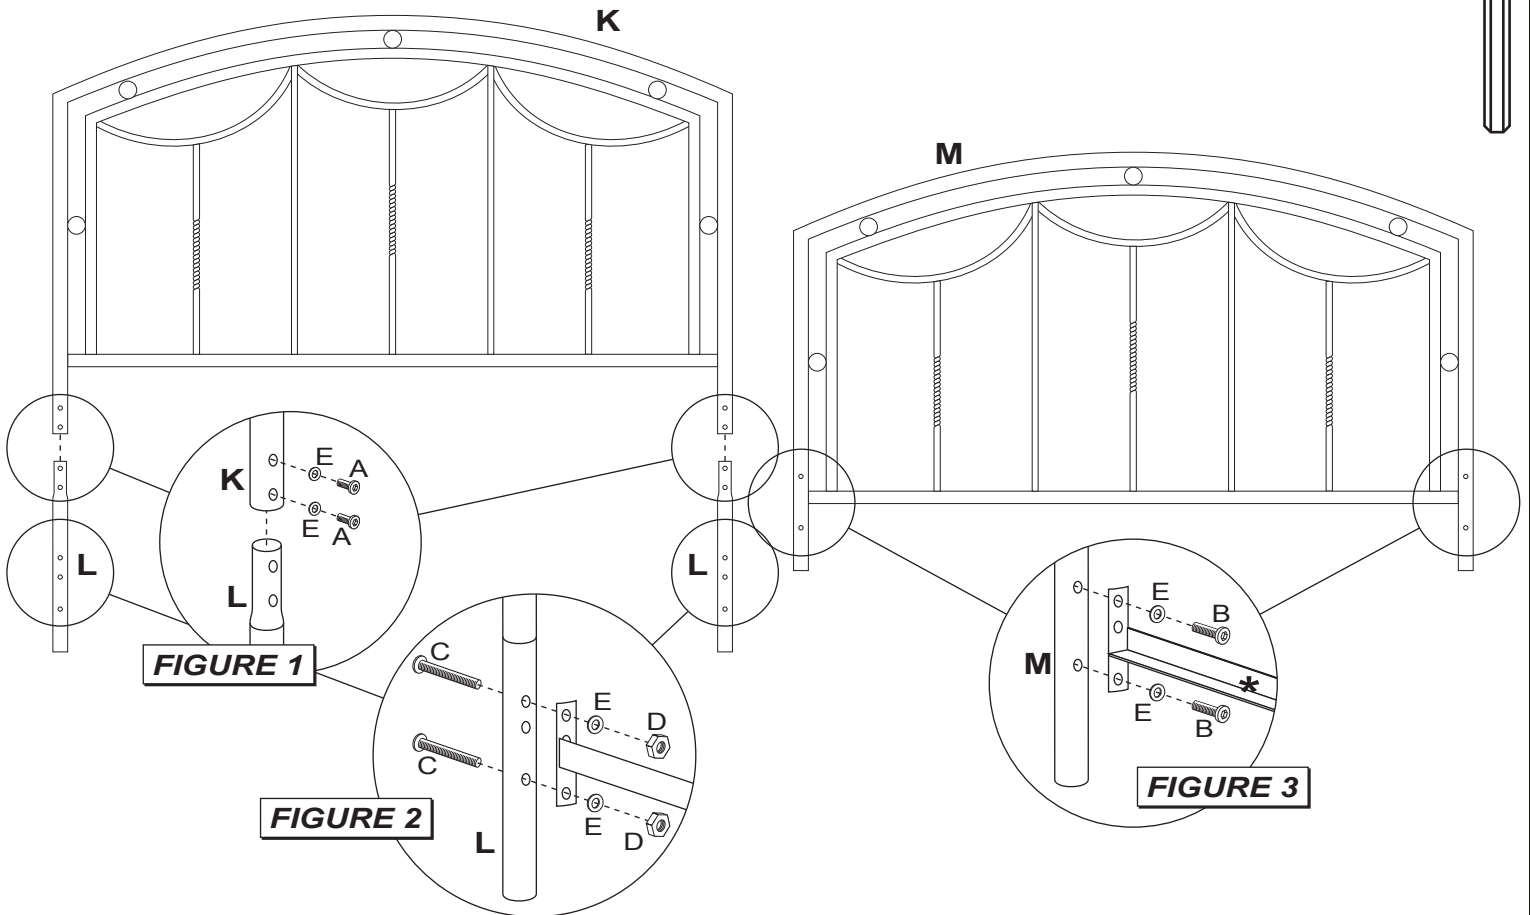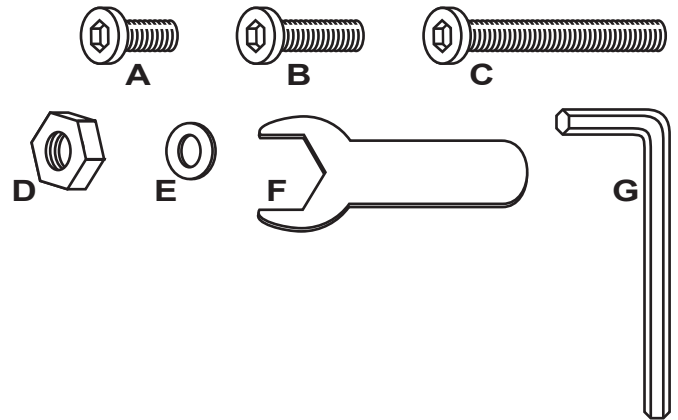

### STEP 1

Begin assembly by attaching each Leg Extension (L) to the bottom of each post on the Headboard Panel (K) by inserting in place and securing with 2 Allen Bolts (A) & 2 Flat Washers (E) per each leg. Tighten all bolts using the Allen Wrench (G) that has been provided.

### STEP 2

Next, attach the Bed Frame (\*Not Included) to each Leg Extension (L) using 2 Allen Bolts (C) from the outside, and 2 Flat Washers (E) & 2 Hex Nuts (D) per each post. Tighten all nuts and bolts using the Allen & Hex Wrenches (F & G) that have been provided.

### STEP 3

Attach the Bed Frame (\*Not Included) to each post on the Footboard Panel (M) using 2 Allen Bolts (B) & 2 Flat Washers (E) per each post. Tighten all bolts. The assembly is now complete.